



2.4" DIGITAL PHOTO FRAME



USER MANUAL

Package Contents:

- Digital Photo Frame
- User Manual
- Driver CD
- USB Cable

Product Overview



Operations

To turn on your frame, turn the on/off switch to on position, then hold down the Power button to turn on/off.

1. It will start automatically and switch into slide-show mode. Press "◀" or "▶" to select your favorite picture.
- 1) To access the menu, press the "M" button. You can use "◀" or "▶" to scroll through the options.

Display Mode
Clock Set
Auto ON/OFF
Clock Disp
Alarm On/Off
Delete
▶ Exit

- 2) To change the display mode, select "Display Mode" in the menu, by pressing the "M" button. You can choose either Auto or Manual.

► Auto Slide

Manual Slide

- To have an auto slide change, select "Auto Slide" and then set the transition time (1-120S).

Auto Slide

Time

8 Seconds

- To have a manual slide change, select "Manual Slide", you can then scroll through the pictures manually by using the "◀" or "▶" buttons.
- 3) To set the time format, choose between 12Hour or 24Hour time and then set the time and date.

► 24 Hour Mode

12 Hour Mode

- Press "◀" or "▶" to set the hour-minute, year-month-day, then press "M" to confirm.

12:00 AM

 
30/1/2008 Monday

- 4) To select the frame to turn on and off automatically, select "Auto ON/OFF" in the menu, then choose the "Auto On/Off, ON" option and set the times desired.


► Auto ON/OFF
ON

Auto ON/OFF
OFF

- Press "◀" or "▶" to select Auto ON. It will switch into time setting as below.

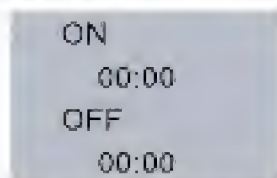


24 Hour Mode

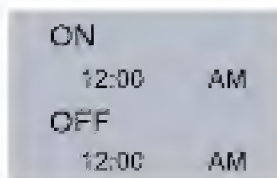 


12 Hour Mode

 
- Press "◀" or "▶" to select Auto OFF and then press "M" to confirm the auto off function.
- 5) To choose the clock display, select "Clock Disp" select either "Disp Clock Normal" or "Disp Clock Water Mark" by using the "M" button.

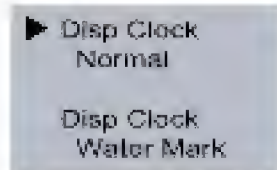

 - Press "◀" or "▶" to select Disp Clock Normal and then press "M" to confirm.

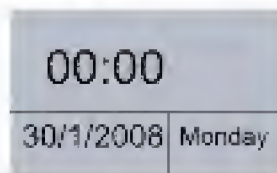


24 Hour Mode

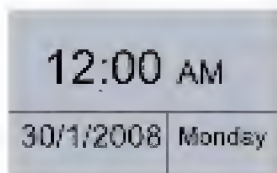 


12 Hour Mode

 - Press "◀" or "▶" to select Disp Clock Water Mark and then press "M" to confirm. The time will be showed on the lower right corner of the photo.

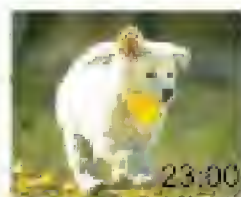

24 Hour Mode

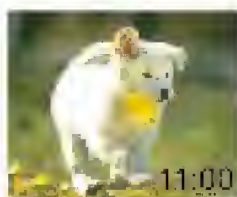 

12 Hour Mode

- 6) To set an alarm, select "Alarm On/Off" in the menu, choose the "Alarm On/Off, On" option and then set the time you wish.

► Alarm On/Off
ON

Alarm On/Off
OFF

- Choose "ON", press "◀" or "▶" to adjust alarm time, then press "M" auto save then exit.

Alarm On
12:00 AM

- 7) To delete photos off the frame, press the "M" button to access the menu while on the photo that you wish to delete. Select the "Del" option in the menu and then press "Del Current", you can delete all photos on the frame by selecting the "Del All" option.

► Del Current
Del All
Exit

- 8) To exit the menu, select the "Exit" option and it will begin to playback the photos. Your frame will go back to playing photos if left idle on the menu for 60 seconds.

Specifications

Digital Photo Playback

LCD	2.4" TFT
Display Resolution	320 x 240 Pixels
Photo Format	JPEG/BMP/PNG/GIF/TIF/TGA
Internal Memory	4MB
Memory Capacity	About 60 Photos
Slide Mode	Yes
Power Source	Lithium battery
Working Temperature	0°C ~ 40°C

Operation System

Win 2000/XP/Vista

Clock

Time Format

24 or 12 Hour

Software Installation

NB: Do not connect unit to PC whilst installing software!

 
Put the Driver CD into CD-ROM, it will pop-up an language selection dialogue automatically. Install the corresponding software into your PC.

Remark

- When the units used in Window system, pls use the PC software file name called setup.exe.



Picture Download


Connect your Photo Frame by USB cable to the PC which has Photo Viewer software. A dialogue box as below will appear on the display of Photo Frame right after connecting the Photo Frame to the PC.





► USB Charge
USB Update

  
1. For powering your Photo Frame by USB power, press "◀" or "▶" to select "USB Charge" and then press "M" to confirm. Your Photo Frame will be able to playback the photos while powered by USB power but will not be able to download photos or turn it off. (It will go to "USB Charge" mode automatically if you do not press one of the three buttons mentioned above within 60 seconds.)
2. For downloading pictures to your Photo Frame, press "◀" or "▶" to select "USB Update" and press "M" to confirm. Your Photo Frame will be detected by your computer automatically and then run "Photo Viewer" in your computer to execute the software to start the photo download process. You will see a dialogue box showed as below on the display of your computer. (If you have selected "USB Charge" but want to change to "USB Update", you have to disconnect Photo Frame from the computer first and then reconnect it to the computer to follow the procedure to "USB Update".)

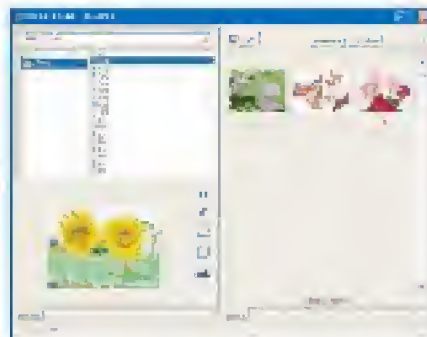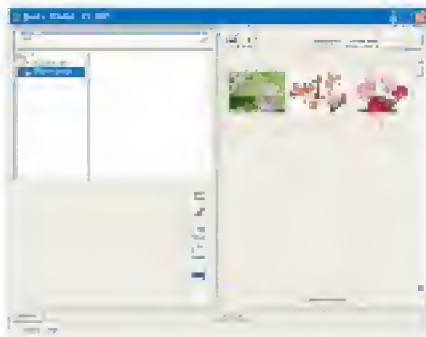

  Select photos from your computer and then click  to add the selected photo into the window.

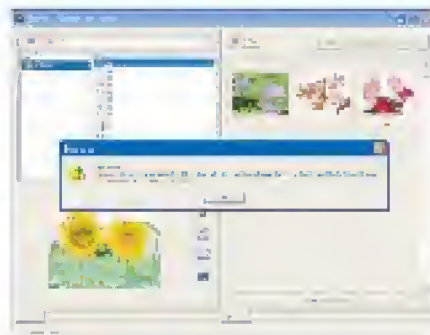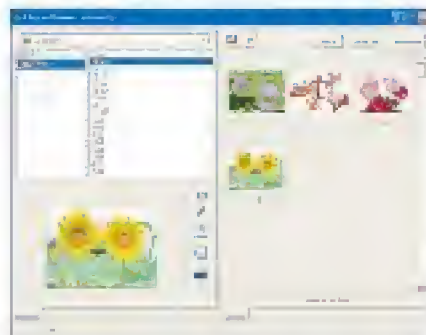

 You can edit the selected photo by clicking  or  to rotate the photo. Click  or  to cut the photo. Click  to delete the selected photo. Then press  to download the selected photos into Photo Frame.

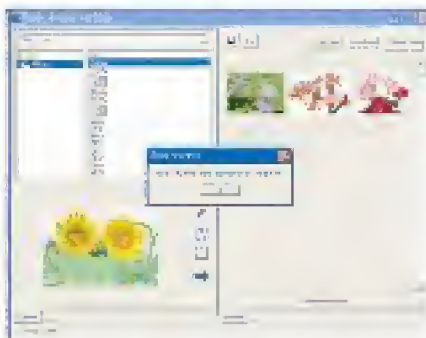

When the downloading is completed, it will pop-up a dialogue box "Photo Viewer data synchronize complete". Click OK to complete the process.